Panasonic

Model No.
TX-L32X20E

Operating Instructions
LCD Television

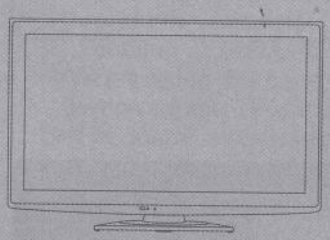

VIERA

For more detailed instructions, refer to the Operating Instructions on the CD-ROM.
To view the Operating Instructions on the CD-ROM, you need a computer equipped with a CD-ROM drive, and Adobe® Reader® (Version 7.0 or later is recommended) installed on your computer.

Depending on the operating system or settings on your computer, the Operating Instructions may not start automatically.
In this case, open the PDF file under the "MANUAL" folder manually to view the instructions.

Contents

Be Sure to Read

- Safety Precautions (Warning / Caution) 2
- Maintenance 3

Quick Start Guide

- Accessories / Options 4
- Identifying Controls 6
- Basic Connection 8
- Auto Setup 10
- How to Use VIERA TOOLS 12
- How to Use Menu Functions 13

VIERA Link
VIERA IMAGE VIEWER
Link
SDXC
AVCHD
dts Digital Out
DOLBY DIGITAL PLUS
GUIDE plus+ GEMSTAR
HDMI HIGH-DEFINITION MULTIMEDIA INTERFACE
DVB Digital Video Broadcasting
HD TV

Thank you for purchasing this Panasonic product.
Please read these instructions carefully before operating this product and retain them for future reference.
The images shown in this manual are for illustrative purposes only.
Please refer to Pan European Guarantee Card if you need to contact your local Panasonic dealer for assistance.

English

TQB0E0922U1G